


# Favorites function

## What is the Favorites function?

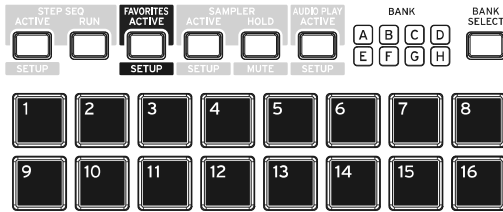


This function lets you register your favorite combinations or programs using the 16 front panel pads so that you can recall them instantly.


You can also register MIDI program changes to a favorite, as a way to easily recall sounds on an external MIDI device.

## Using the Favorites function

### Recalling a favorite sound

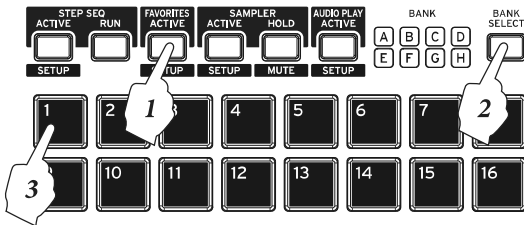

1. Press the FAVORITES ACTIVE button to turn on the Favorites function. (FAVORITES ACTIVE button lit up)

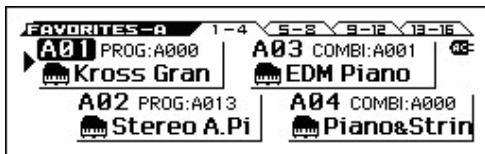

2. Press the BANK SELECT button to select a bank. (BANK LED lit up)
3. Press one of the 1–16 pads to select a favorite. The sound or settings you registered will be recalled. (Button lit up)

**Note:** You can use the VALUE dial or the cursor buttons ◀▶▲▼ to recall favorites consecutively.

**Note:** You can use a foot switch or MIDI foot controller to recall favorites. (see page 23, and page 303 of the Parameter Guide)

**Note:** To turn off the Favorites function, press any one of the PROG, COMBI, or SEQ buttons.

### Registering a sound in Favorites

There are two ways to register a sound as a favorite.

- Directly register a sound as a favorite
- Modify an existing favorite registration


The two procedures are described below.

1. If you want to keep the registrations and settings that you made for the Favorites function, you must save them before you turn off the power. To save these settings, execute the Write Favorites function. (see “Saving your Favorites” on page 54)

### Directly registering a favorite sound

Here’s how the sound that you’ve selected in Program mode or Combination mode can be directly registered as a favorite.

1. In Program mode or Combination mode, select a sound. (see pages 27, 45)

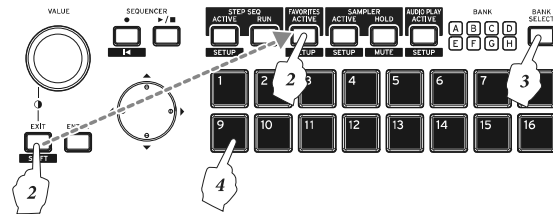

2. Hold down the EXIT button and press the FAVORITES ACTIVE button to enter registration mode. The display indicates "Add to Favorite," and the bank LEDs and pads 1-16 blink.

**Note:** If you decide not to register the sound, press the EXIT button.

3. Use the BANK SELECT button to select a bank.
4. Press one of the 1–16 pads to register the sound to that button.

### Add to Favorite function

You can also register a favorite by executing the Add to Favorite function in Program mode or Combination mode.


Instead of step 2 described above, press the FUNCTION button to access the function list, use the PAGE– (▲) and PAGE+ (▼) buttons to select Add to Favorite, and press the MENU (OK) button to execute. Use steps 3 and 4 described above to register the favorite.

### Modifying an existing favorite registration

In this method, you specify the favorite number, and change the currently-registered sound to a different sound.

This method is convenient if you already know the sounds you want and the order that you want to register them (for example piano in A01 and organ in A02), so that you can step through the favorites and change them consecutively.

1. Select a favorite whose sound you want to change. (See “Recalling a favorite sound”)
2. Press the ENTER button to access the EDIT FAVORITE dialog box. The bank LED and the 1–16 pads you’ve selected will start blinking.

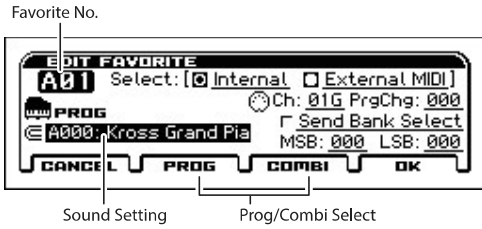

**Note:** If you decide not to make the change, press the EXIT button.

3. Select a sound. In the same way as usual when selecting a sound, use the CATEGORY dial and the VALUE dial to select a sound. As when selecting a program or combination, you can also press the ENTER button and choose from the list that appears. Select a sound in the list, and press the ENTER button to confirm. To switch between programs and combinations, use the PAGE- (PROG) and PAGE+ (COMBI) buttons.
4. When you've found the sound that you want to register, press the MENU (OK) button. The registration will be changed to the new sound.

## Changing the order of favorites

If you want to change the order of the favorites you've registered, you can do so by using the Copy Favorite, Insert Favorite, and Delete Favorite functions.

For details on how to use these functions, please see page 14.

1. Use the Copy Favorite function to copy the selected favorite to the clipboard.
2. Select the favorite where you want to insert the copied favorite. Use the Insert Favorite function to insert the favorite from the clipboard.

**Note:** All favorites existing after the position where you inserted will be moved back one space within that bank. The favorite at the last position in the bank (16) will disappear.

3. To delete the selected favorite, use the Delete Favorite function.

**Note:** All favorites existing after the one you deleted will be moved forward one space within that bank. The last position in the bank (16) will become an initialized favorite.

**Note:** If you execute this function with the All Favorites check box selected, all favorites will be deleted.

## Convenient ways to use favorites


Here are some ways to take advantage of favorites for even more convenience. For each favorite, you can adjust the following settings.

- Change the sound that's registered (see "Modifying an existing favorite registration" on page 53)
- Specify a program change and bank select that will be transmitted via MIDI

You can adjust these settings by editing the favorite. To edit a favorite, proceed as follows.

## Specifying a program change

1. Access the edit page as described in steps 1 and 2 of the "Modifying an existing favorite registration" section on page 53.

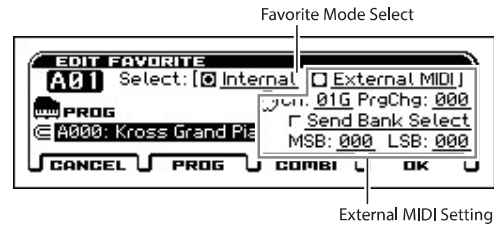

2. In the edit screen, specify the parameters for each favorite.

If you want to recall a sound on an external MIDI device, adjust the appropriate Favorites Mode Select settings.

Choose Internal if you want to play one of the KROSS internal sound generator's sounds. When you register a sound from the front panel, that favorite is automatically specified as Internal. When you recall a favorite that's specified as Internal, the program change that's assigned to that favorite will be transmitted. (E.g., A-3=002, B-1=016)



Choose the External MIDI setting if you want to recall a sound on an external MIDI device. The internal sound generator will be disabled, and will not produce sound.

**Note:** If you want to simultaneously switch and play sounds on the internal sound generator as well as an external MIDI sound module, use a combination with the EXT or EX2 settings. (see page 71 of the Parameter Guide)

## Saving your Favorites

When you've finished registering sounds to buttons, save your Favorites settings. If you turn off the power without saving your settings, they will be lost.

1. Press the FAVORITES ACTIVE button to turn on the Favorites function.

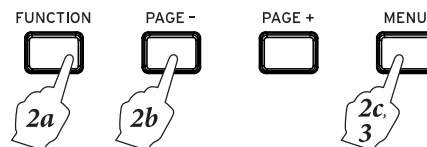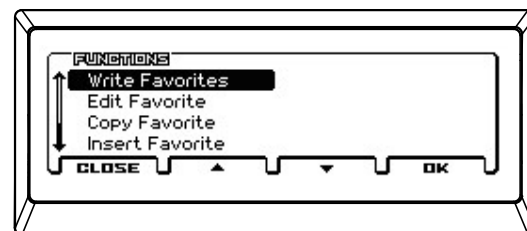

2. Press the FUNCTION button, use the PAGE- (▲) button to select the Write Favorites function, and press the MENU (OK) button.
3. Press the MENU (OK) button. The settings will be saved.